

xiaomi Smart Tower Heater Lite User Manual

*This product is only suitable for well insulated spaces or occasional use.



Safety Precautions

Read this manual carefully before use, and retain it for future reference.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The heater must not be located immediately below a socket outlet.
- Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

WARNINGS

- Do not rinse the heater with water.
- Do not immerse the heater in water.
- Do not spill any water into the heater.
- Do not use the heater in greenhouses or construction sites.
- In order to avoid overheating, do not cover the heater.
- Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

CAUTION

Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.


Usage

- This heater is intended for indoor use only. During use, stably place the heater on a level surface, and do not tilt or tip it over.
- Do not come into physical contact with the heater with bare skin to avoid burns.
- Do not touch the heater with wet hands. Do not use it to keep animals and plants warm.
- Do not touch the heater during or right after using it to avoid scalds.
- To prevent the risk of overheating or fire, never use an extension cord.
- Only use the heater in a well-ventilated environment. Make sure no foreign objects get into or block the air inlet or the air outlet of the heater.
- Do not insert any wires or other foreign objects into any opening of the heater so as to avoid electric shocks.


- Do not place or use the heater near flammable and explosive materials such as gasoline and paint, nor near objects that are easily deformed, discolored, or deteriorated by heat, nor in places with heavy dust like garages or workshops.
- During using this heater, do not share the same electrical circuit with other devices to avoid overloading the circuit.
- Do not disassemble the heater by yourself to avoid safety hazards. If the heater malfunctions, contact the after-sales service team.
- The natural mode function of the heater cannot completely replace the fan function.
- Do not disconnect the heater from power when it has not cooled down completely. Otherwise, the heater may automatically turn off to ensure safety. The heater will resume normal operation after it cools down thoroughly.

Product Overview

Tower Heater

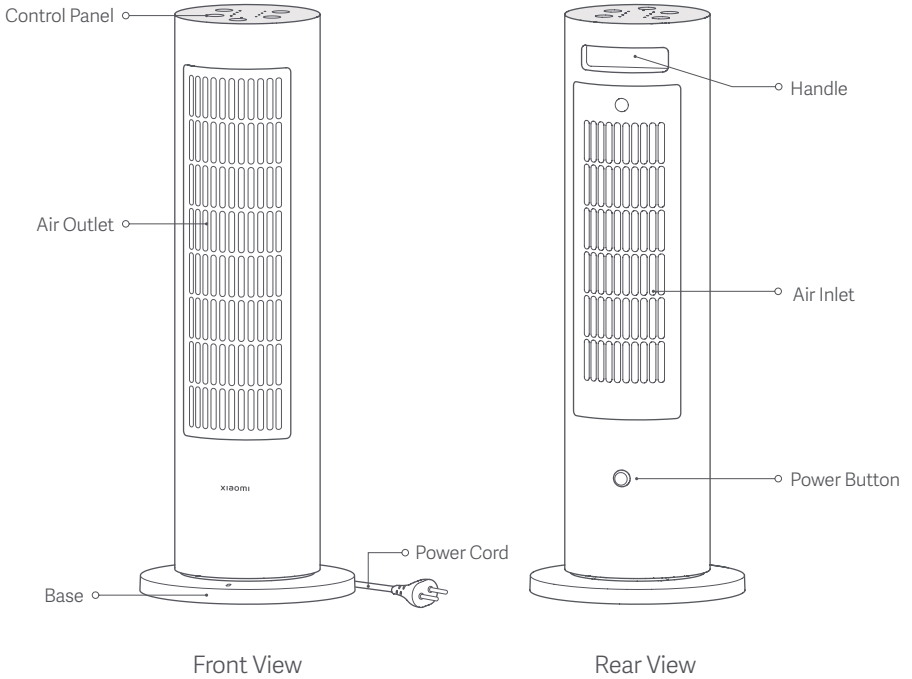

Control Panel

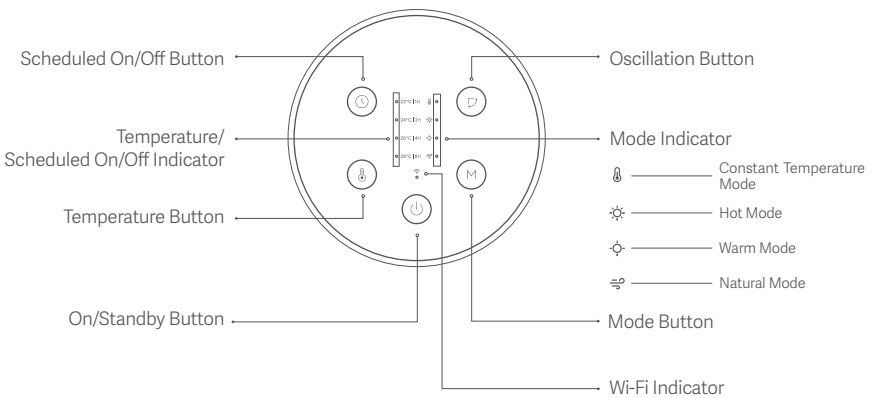

Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

How to Use

Before Use

- Check if the heater is in good condition, and make sure the power cord is not damaged or broken.
- Use a 220–240 V AC electrical outlet with a rated current of at least 10 A. It is recommended to plug the power cord into a wall socket, and do not share the same power strip with other appliances.
- Press the power button on the back of the heater before use. When the heater makes a notification sound, it is connected to power.
- This heater is an electric appliance for close use. When using the heater to blow air directly, it is recommended to place it one to two meters away from you for optimal heating performance.

On/Standby

- Press the on/standby button to turn on the heater.
- Press the on/standby button when the heater is on, the heater will dissipate heat for 30 seconds, then enter standby mode.

Note: After the heater has been running in the natural mode for 30 seconds, pressing the on/standby button can make the heater directly enter standby mode.

- Press the on/standby button when the heater is dissipating heat, the heater will return to the previously used settings.

Note: When planning not to use the heater for a long time, make sure the heater is in standby mode and then turn off the heater and unplug the power cord.

Switching the Mode

- Press the mode button to cycle through the modes of constant temperature, hot, warm, and natural.

Adjusting the Expected Temperature

- Press the temperature button to cycle through the expected temperatures of 22°C, 24°C, 26°C, and 28°C.
- After the expected temperature is set, the heater will automatically enter the constant temperature mode. Other modes do not support the settings of the expected temperature.

Note: If the room temperature is higher than the expected temperature in the constant temperature mode, the heater may switch to the natural mode.

Scheduled Standby

- Press the scheduled on/off button to cycle through the scheduled standby times: one hour, two hours, four hours, eight hours, and off.
- If no operation is performed within three seconds after the scheduled standby time is selected, the indicator will display the expected temperature. If no expected temperature is set, the indicator will go out.
- After the scheduled standby time is selected, the indicator will show the remaining time once you press the scheduled on/off button. You can press the button again within three seconds to cycle through the scheduled standby times.

Enabling/Disabling Oscillation

- Press the oscillation button to enable or disable the oscillation mode.

Enabling/Disabling the Child Lock

- To enable or disable the child lock function, press and hold the oscillation button and the mode button simultaneously for seven seconds.
- The child lock function can also be disabled by turning on the heater again after disconnecting it from power or unplugging the power cord.

Enabling/Disabling the Wi-Fi

- To enable or disable Wi-Fi, press and hold the scheduled on/off button and the oscillation button simultaneously for seven seconds.

Resetting the Wi-Fi

- Press and hold the scheduled on/off button and the temperature button simultaneously for seven seconds. When the heater enters the network configuration mode, the Wi-Fi is reset successfully.

Connecting with Mi Home/Xiaomi Home App

This product works with Mi Home/Xiaomi Home app*. Control your device with Mi Home/Xiaomi Home app.

Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mi Home/Xiaomi Home" in the app store to download and install it.

Open Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow prompts to add your device.

* The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Notes:

- The version of the app might have been updated, please follow the instructions based on the current app version.
- If you fail to scan the heater's QR code, search for its name to add it.



99EE4FEC

Wi-Fi Indicator Status Description

Heater Status	Wi-Fi Indicator Status
Awaiting connection	Blinking slowly (on for 0.2 seconds, then off for 0.8 seconds, repeatedly)
Network connected successfully	On
Reconnecting automatically after a disconnection	Blinking quickly (on for 0.1 seconds, then off for 0.2 seconds, repeatedly)
Updating the firmware	Blinking (on for 0.05 seconds then off for 0.1 seconds, and on for 0.05 seconds then off for 0.8 seconds, repeatedly)
Network connection function disabled	Off

Care & Maintenance

- Before cleaning the heater, turn it off and unplug it and wait for it to cool down completely.
- Use a clean, soft, and damp cloth to wipe the heater. Do not drip water into the heater during cleaning.
- Do not disassemble the heater during care and maintenance.
- After cleaning, ensure the heater is completely dry before using or storing it.
- Avoid bumping or scratching the heater to prevent its surface coating from being damaged and rusting.
- When planning not to use the heater for a long time, store the heater in its original packaging in a dry place.

Troubleshooting

Issue	Possible Cause	Solution
The heater is not connecting to power.	The power cord is not plugged in properly.	Check whether the plug and the power cord are plugged in properly.
	The heater is not turned on.	Press the power button to turn the heater on.
	The heater is not placed steadily.	Place the heater steadily on a level surface.
The heater does not work.	The heater is not started.	Press the on/standby button on the control panel to start the heater.
	The temperature is too high, and the heater automatically turns off to ensure safety.	Keep the air inlet and the air outlet clear and unobstructed, and restart the heater after it cools down.
	The child lock function is enabled.	Disable the child lock.
The heater cannot be found in the app.	The network connection fails.	Reset the Wi-Fi.
	The Wi-Fi signal is weak.	Keep the phone and the heater close to the Wi-Fi signal source.
	The power cord is not plugged in properly.	Plug the heater in properly and turn it on again.
The heater makes unusual sounds when it is moved or shaken.	The steel ball in the anti-tilt switch rattles.	Place the heater on a level surface steadily and avoid shaking it violently.

Specifications

Name: Fan Heater
 Model: LSNFJ02LX
 Rated Voltage: 220–240 V~
 Rated Frequency: 50–60 Hz
 Rated Power: 2000 W

Natural Mode Power: 12 W
 Item Dimensions: 184 × 184 × 500 mm
 Net Weight: Approx. 2.2 kg
 Operation Frequency: 2400–2483.5 MHz
 Maximum Output Power: < 20 dBm

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

Regulatory Compliance Information

EU declaration of conformity



Hereby, Hangzhou Lexiu Electronic Technology Co., Ltd. declares that the radio equipment type LSNFJ02LX is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/service/support/declaration.html>

WEEE Disposal and recycling information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

For detailed e-manual, please go to www.mi.com/global/service/userguide

Model Identifier(s):					
Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal Heat Output	P_{nom}	2.0	kW	Manual heat charge control, with integrated thermostat	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Minimum Heat Output (indicative)	P_{min}	1.4	kW	Manual heat charge control with room and/or outdoor temperature feedback	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Maximum Continuous Heat Output	$P_{max,c}$	2.0	kW	Electronic heat charge control with room and/or outdoor temperature feedback	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Auxiliary Electricity Consumption				Fan assisted heat output	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
At Nominal Heat Output	eI_{max}	0.000	kW	Type of heat output/room temperature control (select one)	
At Minimum Heat Output	eI_{min}	0.000	kW	Single stage heat output and no room temperature control	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
In Standby Mode	eI_{SB}	0.001	kW	Two or more manual stages, no room temperature control	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
				With mechanic thermostat room temperature control	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
				With electronic room temperature control	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
				Electronic room temperature control plus day timer	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
				Electronic room temperature control plus week timer	<input checked="" type="checkbox"/> Yes <input type="checkbox"/> No

	Other control options (multiple selections possible)	
	Room temperature control, with presence detection	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
	Room temperature control, with open window detection	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
	With distance control option	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
	With adaptive start control	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
	With working time limitation	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
	With black bulb sensor	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No

Model Identifier(s):			
Description	Symbol	Value	Unit
Maximum Fan Flow Rate	F	7.4	m ³ /min
Fan Power Input	P	5.6	W
Service Value	SV	1.3	(m ³ /min)/W
Standby Mode Consumption	P_{SB}	1.04	W
Fan Sound Power Level	L_{WA}	53	dB(A)
Maximum Air Velocity	c	0.9	meters/sec
Measurement Standard For Service Value	IEC 60879:1986 + cor1:1992		

WARRANTY NOTICE

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE. INDEED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD. OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

1. LIMITED PRODUCT WARRANTY

XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period.

The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website

<https://www.mi.com/en/service/warranty/>.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above.

Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free.

Xiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

2. REMEDIES

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) repair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shipping costs.

3. HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service, you must deliver the Product, in its original packaging or similar packaging providing an equal degree of Product protection, to the address specified by Xiaomi. Except to the extent prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

4. EXCLUSIONS AND LIMITATIONS

Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademarks, trade name or "Xiaomi" or "Mi" logo.

The Limited Warranty does not apply to any (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi. It is your responsibility to backup any data, software, or other materials you may have stored or preserved on the product. It is likely that the data, software or other materials in the equipment will be lost or reformatted during the service process, Xiaomi is not responsible for such damage or loss.

No Xiaomi reseller, agent, or employee is authorized to make any modification, extension, or addition to this Limited Warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase.

Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

The present warranties do not apply in Hong Kong and Taiwan.

5. IMPLIED WARRANTIES

Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular purpose) will have a limited duration up to a maximum duration of this limited warranty. Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation will not be applied in these cases.

6. DAMAGE LIMITATION

Except to the extent prohibited by applicable law, Xiaomi shall not be liable for any damages caused by accidents, indirect, special or consequential damages, including but not limited to loss of profits, revenue or data, damages resulting from any breach of express or implied warranty or condition, or under any other legal theory, even if Xiaomi has been informed of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of special, indirect, or consequential damages, so the above limitation or exclusion may not apply to you.

7. XIAOMI CONTACTS

For customers, please visit the website: <https://www.mi.com/en/service/warranty/>

The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Hangzhou Lexiu Electronic Technology Co., Ltd.

(a Mi Ecosystem company)

Address: 2006-2010, Building 1, 501, 2nd Baiyang Street, Qiantang New District, Hangzhou, 310018 Zhejiang, China

For further information, please go to www.mi.com

User Manual Version: V1.0

Importer:

Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

www.beryko.cz

